



MV110-8AS

Analog input module
8 channel

User guide

Contents

1. Description	2
1.1 Function	2
1.2 RS485 network	2
1.3 Design.....	2
2. Specifications	4
2.1 Galvanic isolation.....	4
2.2 Environmental conditions.....	4
3. Safety	6
3.1 Intended use	6
4. Installation	7
4.1 Wiring.....	7
4.1.1 Inputs	7
4.1.2 Different input signals	9
5. Configuration	10
6. Operation	12
6.1 Signal processing	12
6.1.1 Sampling	12
6.1.2 Signal change rate limitation.....	12
6.1.3 Digital Filter	12
6.1.4 Linear signal.....	12
6.2 Modbus communication.....	13
6.3 Error diagnosis.....	14
7. Factory settings restoration	15
8. Maintenance	17
9. Transportation and storage	18
10. Scope of delivery	19
Appendix A. Dimensions	20

Description

1. Description

1.1 Function

The MV110-8AS analog input module is an extension module with 8 analog inputs for the following standard signals:

- 4-20 mA
- 0-20 mA
- 0-5 mA
- 0-10 V

The module has the following galvanically isolated circuits:

- Power supply
- Analog inputs
- RS485 interface

Separate inputs are not galvanically isolated.

The module performs the following functions:

- Connection of peripherals with analog outputs
- Conversion of analog signals to digital values
- Sensor-based status diagnostics
- Diagnostics of RS485 network status
- Generation of appropriate error signals or alarm signals
- Slave device in Modbus protocol structure

The module supports Modbus RTU, Modbus ASCII protocols with automatic protocol identification.

The module is to be configured using 'M110 Configurator' software via RS485-USB interface adapter (not included).

1.2 RS485 network

The I/O modules of Mx110 series use common standard RS485 for data exchange. The RS485 serial interface is based on two-wire technology and half-duplex mode. Protocols Modbus RTU, Modbus ASCII and akYtec are supported. The network consists of a master device and can contain up to 32 slave devices. The maximum length is 1200 m. The number of slave devices and the network length can be increased with using a RS485 interface repeater.

Separate devices (slave devices) are connected according to linear (bus) topology. It means that the line goes from the first device to the second one, from the second one to the third one, etc. Star connections and spur lines are not allowed.

Line reflections always occur at the open bus ends (the first and the last node). The higher the chosen data transmission rate, the stronger they are. A terminating resistor is needed to minimize reflections. Experience proves that the most efficient practice is to use terminating resistors of 150 ohm.

The module can be used as slave devices only. Master device can be PLC, PC with SCADA software or control panel.

1.3 Design

- Enclosure: plastic, grey, for DIN-rail or wall mounting
- Terminal blocks: 2 plug-in terminal blocks with 24 screw terminals
- LED „POWER“: power supply indicator
- LED „RS-485“: flashes at data exchange via RS485 interface
- LED „FAULT“: is on in case of fault status (see 6.3)

Description

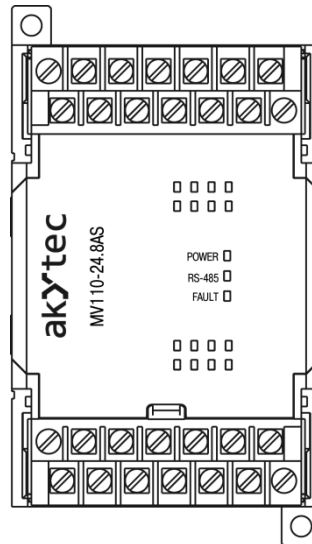


Fig. 1.1 Front View

Dimensional Sketches are given in Appendix A.

Under the cover on the front panel of the module there is a 10-pole pin strip XP1 with the jumper JP1 (see Figure 4.1, 7.3) for factory settings restoration (see 7).

Specifications

2. Specifications

Table 2.1 General Specifications

Power supply		24 (21...35) V DC
Power consumption, max		6 W
Inputs	digital	–
	analog	8
Outputs	digital	-
	analog	–
Sampling time for each input ⁽¹⁾		5±2% ms
Basic error		0.25 %
Temperature influence ⁽²⁾		0.12 %
Resolution	0(4)-20 mA	4 µA
	0-5 mA	1 µA
	0-10 V	2 mV
Input resistance	0(4)-20 mA	130...250 ohm
	0-5 mA	130...500 ohm
	0-10 V	>200 ohm
Permissible input voltage		-40...+40 V
RS485 interface	Terminals	D+, D-
	Protocols	Modbus RTU/ASCII, akYtec
	Baud rate	2.4...115.2 kbit/s
	Data bits	7, 8
	Parity control	even, odd, none
	Stop bits	1, 2
Dimensions		63 x 110 x 75 mm
Weight		approx. 240 g
Material		plastic

⁽¹⁾ Because the sampling of inputs is performed sequentially, the total sampling time is equal to the sum of the times of all connected inputs.

⁽²⁾ % FS, per 10 °C of deviation from (20 ±5) °C within the permissible limits.

2.1 Galvanic isolation

The device has three potential groups:

- Power supply 24 VDC
- Analog Inputs
- RS485

Table 2.2 Galvanic isolation

Groups	Analog inputs (3-12; 15-24)	RS485 (13;14)	Enclosure
Power supply (1.2)	1500 V	1500 V	3000 V
Analog inputs (3-12; 15-24)	-	1500 V	3000 V
RS485 (13;14)	-	-	3000 V

2.2 Environmental conditions

The module is designed for natural convection cooling. It should be taken into account when choosing the installation site.

The following environment conditions must be observed:

- clean, dry and controlled environment, low dust level

Specifications

- closed non-hazardous areas, free of corrosive or flammable gases





Table 2.3 *Environmental conditions*

Condition	Permissible range
Ambient temperature	-20...+55°C
Transportation and storage	-25...+55°C
Relative humidity	up to 80% (at +25°C, non-condensing)
IP code	IP20
Altitude	up to 2000 m above sea level

Safety

3. Safety

Explanation of the symbols and keywords used:

	DANGER	<i>DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.</i>
	WARNING	<i>WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.</i>
	CAUTION	<i>CAUTION indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.</i>
	NOTICE	<i>NOTICE indicates a potentially harmful situation which, if not avoided, may result in damage of the product itself or of adjacent objects.</i>

3.1 Intended use

The device has been designed and built solely for the intended use described in this guide, and may only be used accordingly. The technical specifications contained in this guide must be observed.

The device may be operated only in properly installed condition

Improper use

Any other use is considered improper. Especially to note:

- This device should not be used for medical devices which receive, control or otherwise affect human life or physical health.
- The device should not be used in an explosive environment.
- The device should not be used in an atmosphere with chemically active substance

4. Installation

 **WARNING**

Improper installation

Improper installation can cause serious or minor injuries and damage the device. Installation must be performed only by fully qualified personnel.

- The device is intended to be mounted in a cabinet on DIN-rail or on the wall.
- Install the module in a clean, dry and controlled environment. Further requirements are described in paragraph 2.1.
- The module is designed for convective self-cooling. This should be taken into account when selecting the installation site.

4.1 Wiring

 **WARNING**

Dangerous voltage

Electric shock could kill or seriously injure.

All electrical connections must be performed by a fully qualified electrician.

Ensure that the mains voltage matches the voltage marked on the nameplate!

Ensure that the device is provided with its own power supply line and electric fuse!

 **NOTICE**

Switch on the power supply only after the wiring of the device has been completely performed.

- Terminal connections are shown in Fig. 4.1, terminal assignments are given in Table 4.1.
- The inputs should be wired in accordance with Fig. 4.2 – 4.3.
- Connect the supply voltage to the terminals 24V and 0V.
- The maximum wire cross-section for power supply is 1.5 mm²

 **NOTICE**

EMC-safety

Signal cables should be routed separately or screened from the supply cables.

Only shielded cable may be used for data transmission and signal lines.

Shield in the control cabinet for best electromagnetic immunity recommended.

- Connect the RS485 line to the terminals D+ and D-.
- Use twisted pair cable for RS485 connection. The length of the line should not exceed 1200 m.

4.1.1 Inputs

The following must be observed:

- All the AIx terminals are internally connected.
- The total resistance of the sensor output with connection lines must not exceed 100 ohm.
- When connecting, one must ensure that the permissible input voltage (see Table 2.1) is not exceeded. If the voltage is within the permissible limits the input current will be limited to 35 mA automatically.

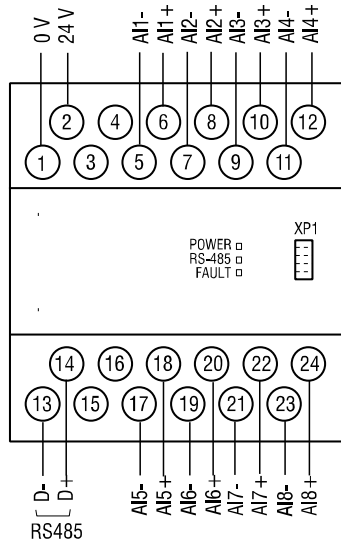


Fig. 4.1 Electrical connections

Table 4.1 Terminal assignments

No	Designation	Description	No	Designation	Description
1	0 V	Power supply	13	D-	RS485 D-
2	24 V	Power supply	14	D+	RS485 D+
3		free	15		free
4		free	16		free
5	AI1-	common negative	17	AI5-	common negative
6	AI1+	AI1+	18	AI5+	AI5+
7	AI2-	common negative	19	AI6-	common negative
8	AI2+	AI2+	20	AI6+	AI6+
9	AI3-	common negative	21	AI7-	common negative
10	AI3+	AI3+	22	AI7+	AI7+
11	AI4-	common negative	23	AI8-	common negative
12	AI4+	AI4+	24	AI8+	AI8+

When connecting current and voltage signals take into account an external additional voltage source

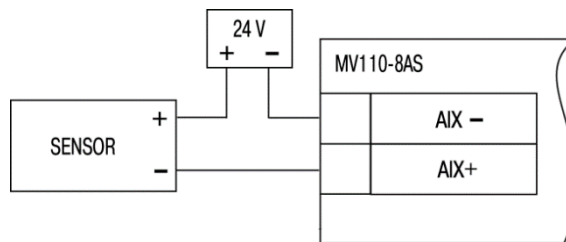


Fig. 4.2 Connection of 2-wire sensors

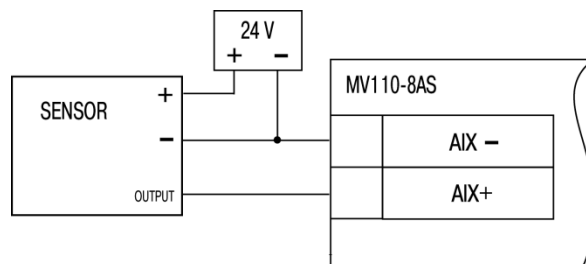


Fig. 4.3 Connection of 3-wire sensors

Installation

4.1.2 Different input signals

Each input can be configured for any type of signal individually. The signal type (sensor type) must be selected for in-t parameter. A full list of configuration parameters is presented in Appendix B.

If a sensor has a positive output you can use a common additional voltage source. In case of a negative output, a separate additional voltage source should be provided for each sensor.

Configuration

5. Configuration

► NOTICE

Before starting

Before switching on, make sure that the device has been kept at the specified ambient temperature (-20... +55 ° C) for at least 30 minutes.

The configuration tool 'M110 Configurator' allows viewing, editing and saving of parameters. The complete list of parameters is shown in Table 5.1.

The module must be configured in order to use it in RS485 network. Proceed as follows:

- install the configuration software 'M110 Configurator' on the PC
- connect the module to the USB interface of the PC over USB/RS485 adapter (not included)
- connect a power source 24V DC to the module terminals 24V/0V
- switch the power on
- run the M110 Configurator

If the factory settings of the module have not been changed, then connection with the module is established automatically. The module is automatically identified, the module configuration parameters are readout and a window with an appropriate configuration mask opens.

Otherwise, the network parameters of the configurator must be adapted.

Table 5.1 Configuration parameters

Name	Parameter	Valid value	Meaning	Default setting
Common parameters				
dev	Device	up to 8 characters		MV110-8AS
ver	Firmware version	up to 8 characters		Manufacturer
n.Err	Last error code	0...255 (at power on – 0)		–
exit	Exit code	0	software reset	–
		6	hardware reset	
		7	power on	
		8	watchdog timer	
Network parameters				
bPS	Baud rate, kbit/s	0	2.4	9.6
		1	4.8	
		2	9.6	
		3	14.4	
		4	19.2	
		5	28.8	
		6	38.4	
		7	57.6	
PrtY	Parity *	0	none	None
		1	even	
		2	odd	
Sbit	Stop bits *	0	1	1
		1	2	
Addr	Device address	1...247		16
Rs.dL	Response delay, ms	0...45		2
Input Parameters				

Configuration

Name	Parameter	Valid value	Meaning	Default setting
ComF	Input filter for all channels	0	off	off
		1	50 Hz, first-order	
		2	50 Hz, second-order	
		3	50 Hz, fourth-order	
		4	200 Hz, first-order	
in-t	Sensor type	0	off	4-20 mA
		1	4-20 mA	
		2	0-20 mA	
		3	0-5 mA	
		4	0-10 V	
in.Fd	Filter time constant, ms	10...10000		10
Ain.L	Lower limit	FLOAT32		0
Ain.H	Upper limit	FLOAT32		20000
dP	Decimal point	0...3		0
Peak	Rate of change limit	1...200 s ⁻¹		200
OutF	Output filter	0	off	0
		1	Exponential filter	
		2	Moving average filter, L=2	
		
		16	Moving average filter, L=16	

* Invalid network parameter combinations:

- *prty=0; sbit=0; len=0*
- *prty=1; sbit=1; len=1*
- *prty=2; sbit=1; len=1*

Operation

6. Operation

The module is controlled by the master device in Modbus network. Following Modbus functions are available: 03, 04 for reading and 15, 16 for writing.

6.1 Signal processing

Inputs are sampled cyclically. The measured values are converted into digital values, analyzed and processed in accordance with the set parameters. The results are saved in data registers (Table 6.1).

6.1.1 Sampling

An input is included into the sampling list if the signal type is selected. If the parameter **int** is set to OFF, then the input is excluded from the list.

6.1.2 Signal change rate limitation

Signal change rate limitation allows reducing impulse noise efficiently. This limitation can be adjusted using **Peak** parameter so that the noise suppression does not affect a measuring signal.

The parameter can be changed within the range from 1 to 200 s⁻¹ in increments of 1 s⁻¹.

Unit 1 s⁻¹ corresponds to 1/200 of the measurement range.

For example, for 4-20 mA signal:

1 s⁻¹ corresponds to $1 \cdot 16 / 200 = 0.08 \text{ mA}$ - maximum noise suppression

200 s⁻¹ correspond to $200 \cdot 16 / 200 = 16 \text{ mA}$ - noise suppression is off

If the maximum signal change rate does not exceed 50 mA/s, then

$$\frac{50 \text{ mA/s}}{16 \text{ mA}} = 3.125 \text{ Measuring range/s}$$

In this case, **Peak** = 4 guarantees the best noise suppression and the minimum measuring signal impact at the same time.

The **Peak** factory setting is 200.

6.1.3 Digital Filter

The digital filter consists of two stages.

- At the first stage, a common filter affecting all 8 channels is used. The filter type must be set in **comf**. parameter. The filter provides noise suppression with frequencies the values of which are a multiply of 50 Hz. The filter factory setting is "off".
- At the second stage, a channel filter is used and must be adjusted in **outf**. parameter.
- If **outf** = 1, the exponential filter is on. The filter time constant must be set in **in.fd** parameter in ms. The higher the value, the higher the noise resistance and the slower the input response.

6.1.4 Linear signal

To scale the linear signal (current or voltage) the measurement limits must be set. Parameters **Ain.L** 'Lower limit' and **Ain.H** 'Upper limit' are set in physical.

If **Ain.L** < **Ain.H**, then

$$\text{Measured value} = \text{Ain.L} + \frac{(\text{Ain.H} - \text{Ain.L}) \cdot (S_i - S_{\min})}{S_{\max} - S_{\min}}$$

If **Ain.L** > **Ain.H**, then

$$\text{Measured value} = \text{Ain.L} - \frac{(\text{Ain.L} - \text{Ain.H}) \cdot (S_i - S_{\min})}{S_{\max} - S_{\min}}$$

where

S_{\max} – is the upper signal limit (for example, 20 for 4-20 mA signal)

Operation

S_{min} – is the lower signal limit (for example, 4 for 4-20 mA signal)
 S_i – is the actual signal value

6.2 Modbus communication

Modbus-RTU and Modbus-ASCII protocols are supported.

Modbus functions 03 and 04 for the following parameters are available:

- Measured value
- Time mark
- Error code (see 6.3)

The measured value is in two formats available:

- Integer (16 bits)
- Integer with a time mark (16 bits + 16 bits)
- Floating-point with a time mark (32 bits + 16 bits)

The integer is calculated by multiplication of the measured value by 10^{dP} . The parameter **dP** is used for a decimal point and can be set within the range 0...3.

When a floating-point number value is transmitted, the most significant byte of 32-bit data is stored in the first register (big-endian).

The time mark is cyclic time within the range from 0 to 655.36 seconds with the increment of 0.01 second saved as a 2 byte integer. It determines the exact time of measurement within the cycle. When the module is powered on, the cycle starts from 0 and returns to the initial state in 655.36 seconds.

Table 6.1 Modbus registers

Parameter	Description	Data type	Input number	Register	Access
				hex	
exit	Cause of reset	INT16		0x88	r
n.Err	Last network error	BYTE		0x90	r
bPS	Baud rate	INT16		0x30	r/w
PrtY	Parity	INT16		0x38	r/w
Sbit	Stop bits	INT16		0x40	r/w
Addr	Device address	INT16		0x48	r/w
Rs.dL	Response delay	INT16		0x50	r/w
ComF	Common filters	INT16		0x28	r/w
in-t	Sensor type	INT16	1	0x00	r/w
		
			8	0x07	r/w
in.Fd	Filter time constant	INT16	1	0x18	r/w
		
			8	0x1F	r/w
Ain.L	Measuring range / lower limit	FLOAT32	1	0x58, 0x59	r/w
		
			8	0x66, 0x67	r/w
Ain.H	Measuring range / upper limit	FLOAT32	1	0x68, 0x69	r/w
		
			8	0x76, 0x77	r/w
dP	Decimal point	INT16	1	0x20	r/w
		
			8	0x27	r/w
Peak	Change rate limit	INT16	1	0x08	r/w
		

Operation

Parameter	Description	Data type	Input number	Register	Access
				hex	
			8	0x0F	r/w
OutF	Channel filter	INT16	1	0x10	r/w
		
			8	0x17	r/w
ird	Measured value (INT)	INT16	1	0x100	r/w
		
			8	0x107	r/w
irdt	Measured value (INT) with a time mark	INT16 +INT16	1	0x108, 0x109	r/w
		
			8	0x116, 0x117	r/w
srd	Error code	INT16	1	0x118	r/w
		
			8	0x11F	r/w
read	Measured value (FLOAT) with a time mark	FLOAT32 +INT16	1	0x120...0x122	r/w
		
			8	0x135...0x137	r/w

6.3 Error diagnosis

When polling inputs, the module controls the status of the connected sensors, the correctness of communication and the measurement. The detected errors are transmitted with the response as an error code (see Table 6.2).

If there is a measurement error, the last correctly saved value is transmitted.

Table 6.2 Error Codes

Error	Comment	Code
Measurement correct	Transmission in progress	0x0000
Measured value error	Measured value incorrect	0xF000
Measurement not ready	Just upon restart	0xF006
Sensor switched off	in-t parameter set to OFF	0xF007
Measurement value too high	Exceeded the measuring range of the selected sensor type	0xF00A
Measurement value too low	Below measuring range of the selected sensor type	0xF00B
Wire break	Live zero linear signal	0xF00D
Calibration error	Calibration incorrect	0xF00F

Factory settings restoration

7. Factory settings restoration

If communication between the PC and the module cannot be established and the network parameters of the module are unknown, the factory settings of the network parameters must be restored. Proceed as follows:

- power off the module
- remove the cover on the front panel of the module
- install jumper JP1 (see Figure 7.3) onto pins 9-10 (bottom row), now the module is operated with default network parameters, the user settings are saved
- switch the power on

Dangerous voltage

Electric shock could kill or seriously injure.

Voltage in some parts of the printed-circuit board can be dangerous! Direct contact with the circuit board or penetration of a foreign body in the enclosure must be avoided!



WARNING

- start the 'M110 Configurator' software
- in the 'Connection to device' window set the parameters to default (see Table 7.1) or click the 'Use factory settings' button (see Fig. 7.1)

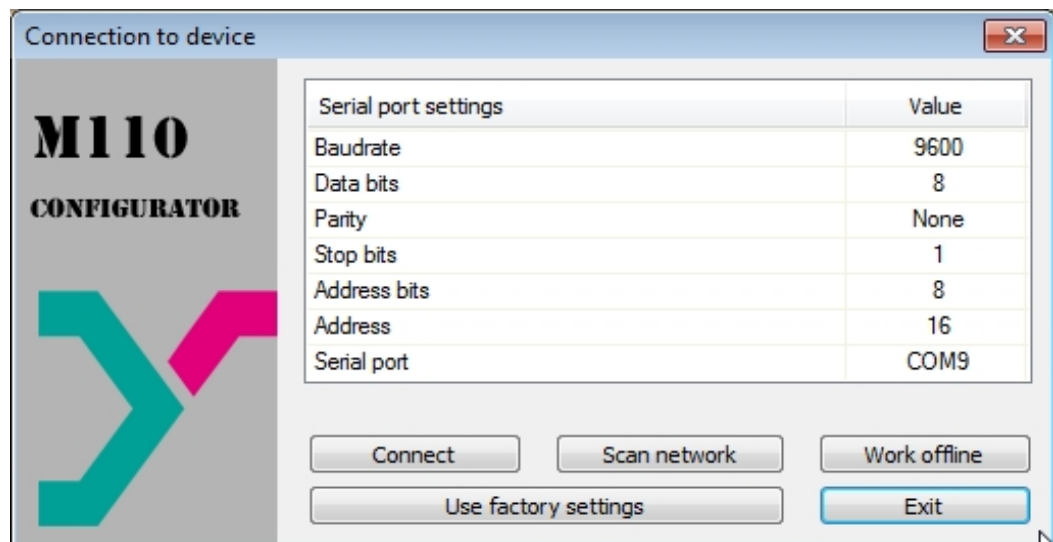


Fig. 7.1 Start window of configuration software

- press "Connect" button. Connection is established with the default network parameters
- the main window of the configurator opens
- now the saved network parameters of the module can be read out (see Fig. 7.2)
- open the 'Network parameters' folder in the configuration tree, read and note down the values of the network parameters
- close the Configurator
- switch the power off

Factory settings restoration

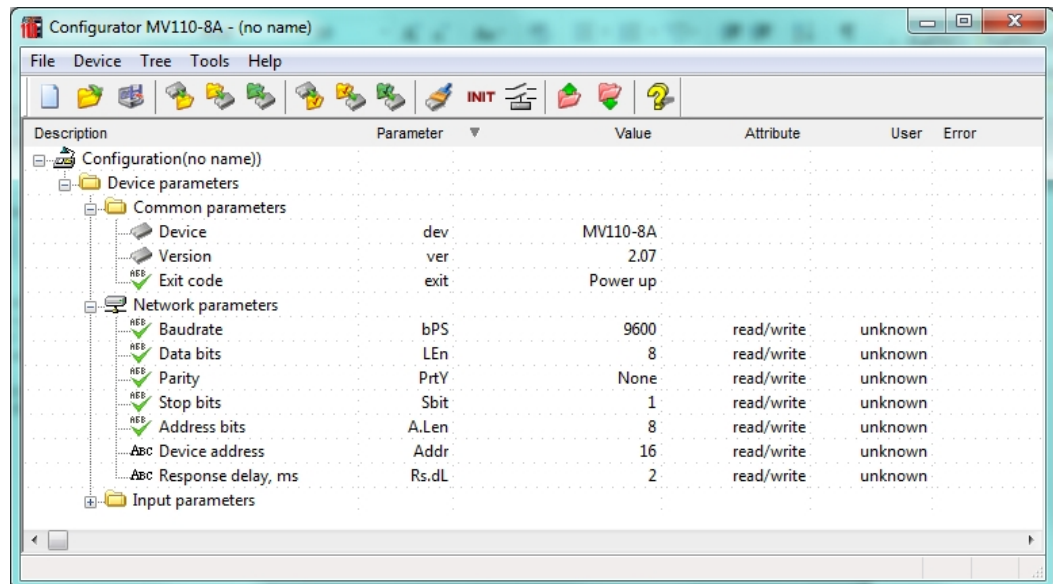


Fig. 7.2 Main window of M110 Configurator

- remove jumper JP1 and install it onto pin 10 (do not strap!)
- close the cover
- switch the power on
- restart the Configurator
- enter the written network parameters
- press 'Connect' button

The module is ready for operation.

Table 7.1 Network factory settings

Parameter	Name	Deafault
Baud rate	bPS	9600
Data bits	LEn	8
Parity	PrtY	none
Stop bits	Sbit	1
Address bits	A.Len	8
Address	Addr	16
Response delay, ms	Rs.dL	2

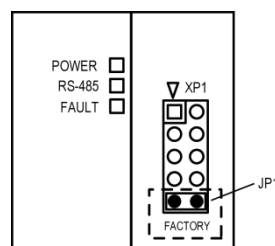


Fig. 7.3 Jumper JP1

8. Maintenance

The maintenance includes:

- cleaning of the housing and terminal blocks from dust, dirt and debris
- check the device fastening
- checking the wiring (connecting leads, fastenings, mechanical damage)

The device should be cleaned with a damp cloth only. No abrasives or solvent-containing cleaners may be used. The safety information in section 3 must be observed when carrying out maintenance.

Transportation and storage

9. Transportation and storage

Pack the device in such a way as to protect it reliably against impact for storage and transportation.

The original packaging provides optimum protection.

If the device is not taken immediately after delivery into operation, it must be carefully stored at a protected location. The device should not be stored in an atmosphere with chemically active substances.

Permitted storage temperature: -25...+55 °C

▶ NOTICE

Transport damage, completeness

The device may have been damaged during transportation.

Check the device for transport damage and completeness!

Report the transport damage immediately to the shipper and akYtec GmbH!

Scope of delivery

10. Scope of delivery

- Module MV110-24.8AS 1
- Short guide 1

Appendix A. Dimensions

Appendix A. Dimensions

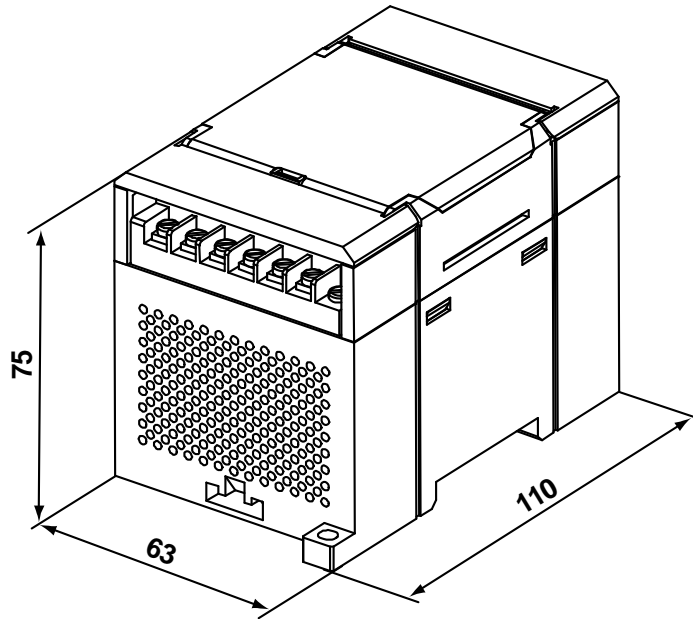


Fig. A.1 External dimensions

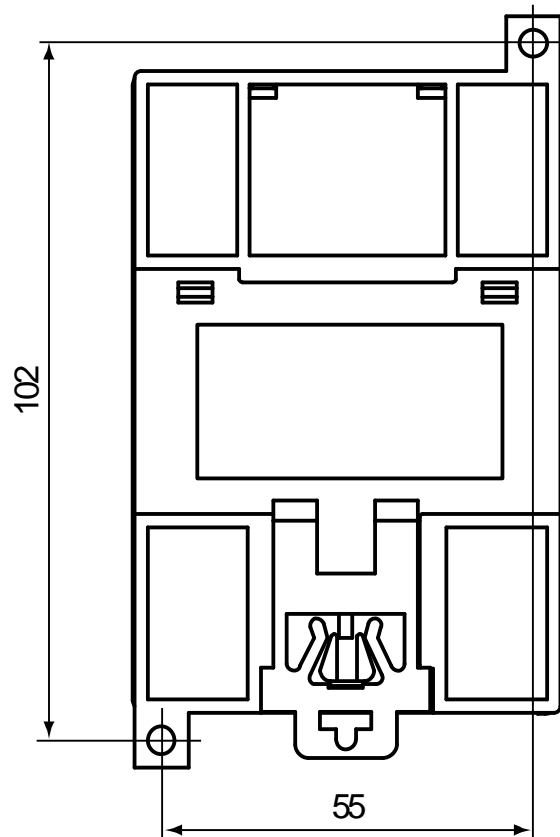


Fig. A.2 Wall mounting dimensions

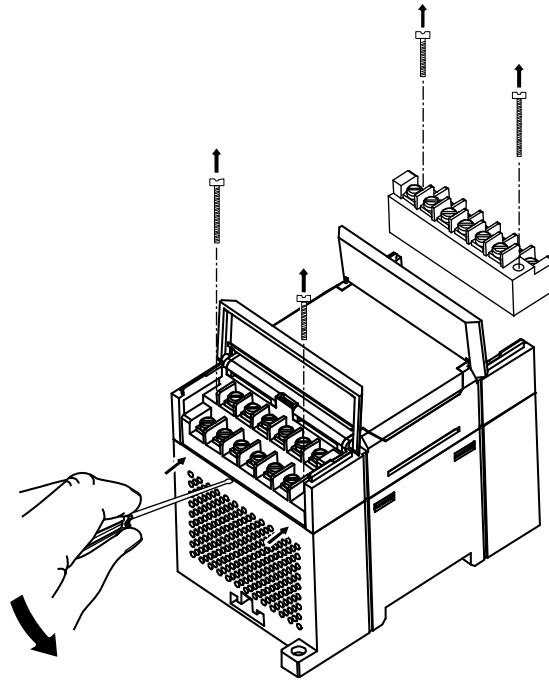


Fig. A.3 Replacement of terminal blocks