

## MODBUS MASTER

	1st generation (PR200 / PR100 / PR102 / SMI200)	2nd generation (PR225 / PR205 / PR103)
<b>Supported protocols</b>	Modbus RTU, Modbus ASCII (user-selectable)	Modbus RTU, Modbus ASCII (user-selectable), Modbus TCP
<b>Max. number of slave devices</b>	16 for each interface	32 across all interfaces
<b>Max. number of requests</b>	255 variables per device. One variable can correspond (depending on settings) to a read request, a write request, or a combined read/write request.	192 variables per device starting with akYtec ALP 2.7.349 and firmware versions: PR205: 1.5.0, PR103: 1.7.0. 64 variables in earlier software versions. One variable can correspond either to a read request or a write request.
<b>Support for group requests</b>	Supported starting from akYtec ALP 2.11 and firmware versions: PR100: 3.08, PR100 [M02]: 2.70, PR102: 2.70, PR200: 2.73, SMI200: 2.73. Number of registers per request: up to 48 (configurable).	Supported starting from akYtec ALP 2.10 and firmware versions: PR225: 1.9.0, PR205: 1.9.0, PR103: 1.11.0. Number of registers per request: up to 16 (configurable).
<b>Supported Modbus functions</b>	0x01, 0x02, 0x03, 0x04, 0x05, 0x06, 0x0F, 0x10	0x01, 0x02, 0x03, 0x04, 0x06, 0x0F, 0x10
<b>Supported data types</b>	Bool, Uint16, Uint32, Float	Bool, Uint16, Uint32, Float
<b>Support for byte/register order</b>	Supported; affects only variables of type Float and Uint32	Supported; affects only variables of type Float and Uint32
<b>Support for broadcast request</b>	Not supported	Not supported
<b>Support for polling templates</b>	Supported	Supported starting from akYtec ALP 2.10
<b>Polling control support</b>	Device level: poll / do not poll (parameter Polling). Request level: triggering by rising edge of a boolean variable (parameters Read start / Write start) + option Write on change.	Same logic: device level (Polling parameter) and request level (Read start / Write start) + Write on change option.
<b>Control of desired polling period</b>	Device level	Request level
<b>Diagnostics support</b>	Device level: communication present / absent (parameter Status). Request level: Modbus error code (parameter Status).	Device level: communication present / absent (parameter Status).
<b>Modbus TCP support</b>	Not supported	Supported. Polling of all slave devices occurs sequentially (only one client connection is active at a time). Requests are sent sequentially within the connection. Valid range for Unit ID: 1...247.

## MODBUS SLAVE

	1st generation (PR200 / PR100 / PR102 / SMI200)	2nd generation (PR225 / PR205 / PR103)
<b>Supported protocols</b>	Modbus RTU, Modbus ASCII (automatic detection — the response is sent in the same format as the request)	Modbus RTU, Modbus ASCII (automatic detection — the response is sent in the same format as the request), Modbus TCP
<b>Memory area model</b>	Unified memory space with overlapping Input and Holding registers	Unified memory space with overlapping Input and Holding registers
<b>Memory size</b>	64 registers (128 bytes)	1020 registers (2040 bytes)
<b>Support for group requests</b>	Supported without artificial limitations	Supported without artificial limitations
<b>Supported Modbus functions</b>	0x01, 0x02, 0x03, 0x04, 0x05, 0x06, 0x0F, 0x10	0x03, 0x04, 0x06, 0x0F, 0x10, 0x14, 0x15
<b>Bit mask handling</b>	Bit mask parameters can be read using either function 0x03 or 0x01. When using 0x01, the register number	Bit mask parameters can be read only using function 0x03.
<b>Supported data types</b>	Uint16, Float	Uint16, Float
<b>Support for byte/register order</b>	Supported, but affects only system variables of type Float and Uint32.	Not supported. When polling variables occupying two or more registers, the following settings must be used: <ul style="list-style-type: none"> <li>Byte order — most significant byte first</li> <li>Register order — least significant register first</li> </ul>
<b>Support for broadcast request</b>	Supported	Supported
<b>Modbus TCP support</b>	Not supported	Supported, up to 4 simultaneous client connections (a fifth connection is independent and reserved for akYtec Cloud). The Unit ID in requests is not validated.
<b>RETAIN support</b>	All network variables are always non-volatile.	Starting from akYtec ALP 2.9, non-volatility can be configured individually for each network variable. In earlier versions, all network variables are always non-volatile.
<b>Register map export support</b>	Export to akYtec Cloud, and CSV file is supported.	Device level: communication present / absent (parameter Status).